

EMBER COMBO HAND WARMER & 10000MAH POWER BANK

INSTRUCTION MANUAL

EPB-EM25

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.


IN THE BOX

- EPB-EM25 Ember Combo Hand Warmer & 10000mAh Power Bank (x1)
- Charging Cable (x1)

SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the product according to the instructions in this manual. Never use the product for anything other than its intended purpose.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the product should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose product or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the product or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if the product or charging cable is damaged. If the product or charging cable is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- Do not over charge battery.
- This product contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this product.

PRODUCT DIAGRAMS

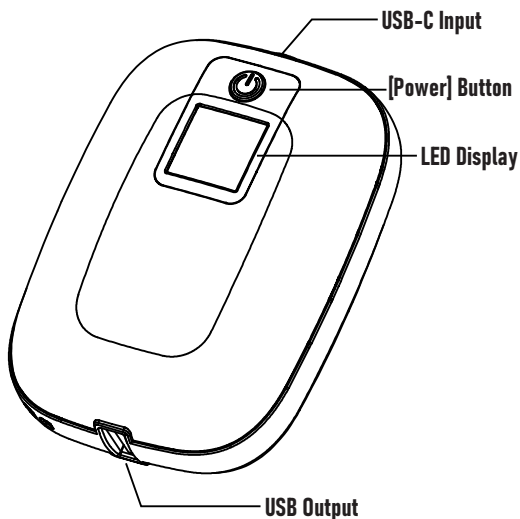

INSTRUCTIONS

Charge the power bank fully before using for the first time.

CHARGING THE POWER BANK

- Plug the small connector of the included charging cable into the USB-C port on the power bank.
- Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED display will flash to indicate the available power level while power bank is in charging and stop flashing when the power bank is fully charged.

CHARGING ELECTRONIC DEVICES WITH THE POWER BANK

- Using the cable of the device you wish to charge, connect the charging cable to your device with the appropriate connector.
- Connect the other end of the cable to the USB port of the power bank.
- The power bank will begin to charge automatically.
- The LED display will show available power level when charging.
- Remove the cable from your mobile device when it is fully charged.

HOW TO USE HAND WARMER

- Press and hold the **[Power]** button to turn ON the hand warmer function.
- The LED display will light up and show handwarmer temperature level indicating the hand warmer function is turned on.
- Press the **[Power]** button to switch temperature level of hand warmer.
 - Level 1 - 113°F
 - Level 2 - 122°F
 - Level 3 - 131°F
- Wait for 30 seconds for the hand warmer to heat up.
- The hand warmer will stay warm for about 6 hours when fully charged.
- Press and hold the **[Power]** button to turn OFF the hand warmer function.

Note:

The power bank output will shut off when the hand warmer function is turned on.

LED DISPLAY

- Press the **[Power]** button to turn on LED display.
- The upper part of LED display will show the available power level with a battery icon on the left.
- The lower part of LED display will show the temperature level with a flame icon on the left.

TECH SPECIFICATIONS

- Battery Capacity: 10000mAh/3.7V/37Wh

- USB -C Input: DC 5V/2A
- USB Output: DC 5V/2A
- Working Temperature: 14°F ~ 122°F (-10°C ~ 50°C)

FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FC
Made in China